Product Care & Maintenance



Thermally Fused Laminate Worksurfaces

RightAngle™ Products' thermally fused melamine worksurfaces can be easily cleaned using a solution of warm water and mild detergent and a soft cloth. Be sure to dry thoroughly.

- Coffee, tea, or other difficult stains may be removed using a mild, non-abrasive, all-purpose cleaner or a paste of baking soda and water. Lightly scrub using a soft cloth or soft bristled brush. Please note: 10-20 strokes should remove most stains—excessive force or scrubbing may damage the surface.
- Harsh chemicals or abrasive materials should not be used. Should the surface come in contact with drain, toilet, or oven cleaner, immediately remove the chemical, rinse thoroughly and wipe dry. Abrasives such as scouring pads or gritty cleaners may permanently dull and/or scratch the surface and result in future staining.
- Do not polish or wax the surface.
- Protect the surface from hot or sharp objects. Do not place hot cookware, dishes, or objects onto the surface.
 Knives and other sharp objects used directly on the surface can also be damaging.

Markerboard HPL Worksurfaces

- Use only markers that are designed for use on erasable markerboard surfaces. Dry erase writing can be removed with a "white board" eraser or a clean, dry cloth. Be sure to dry thoroughly.
- Dry erase markerboard laminate can be cleaned with mild detergent and a soft cloth. Whiteboard shadows or ghosting may be removed with a markerboard cleaner and conditioner designed specifically for dry erase surfaces.
- Do not polish or wax the surface.
- Acid or alkaline-based cleaners, compounds, etc., will mar etch, corrode, and permanently discolor the decorate surface of the laminate, severely affecting the appearance and performance. Never use these materials on the dry erase markerboard laminate, nor allow containers, rags, etc., contaminated with them to have contact with the surface.
- Accidental spills or splatters of these harsh chemicals should be wiped off immediately, and then cleaned thoroughly using mild detergent and a soft cloth. However, a reduction in performance properties of the surface may occur.
- Protect the surface from hot or sharp objects. Do not place hot cookware, dishes, or objects onto the surface.
 Knives and other sharp objects used directly on the surface can also be damaging.

Desk & Table Bases

All RightAngle™ Products' desk and table bases should be kept dry from water, rain, ice, snow, and salt.

To clean, use warm water and mild detergent with a soft cloth. Be sure to dry thoroughly.



Product Care & Maintenance



High Pressure Laminate (HPL) Worksurfaces

Custom HPL is available upon request. Depending on the specific HPL chosen, the product details and cleaning requirements may vary. However, below are general care and maintenance guidelines that apply to most high pressure laminate.

- Most high pressure laminates are hard, scratch resistant, and can withstand brief exposure to low heat (prolonged exposure may cause laminate separation).
- For normal cleaning, use a clean, damp, non-abrasive cloth and a mild detergent or household cleaner. Rinse with clean water, using a clean, non-abrasive cloth. Do not flood the laminate. Dry the surface with a soft, clean, non-abrasive cloth.
- Never use cleaners containing acid or alkali. These cleaners will mar, etch, corrode, and permanently discolor the laminate surface. Accidental spills from these compounds should be wiped off immediately, and the area rinsed thoroughly with water.
- HPL can withstand specific disinfectants. These include those on the EPA Approved List N Products, which include over 420+ disinfectants. The specific cleaners can be found on the EPA website. This may include commercial and healthcare cleaners, but reference the EPA list for more details
- Harsh chemicals or abrasive materials should not be used. Should the surface come in contact with drain, toilet, or oven cleaner, immediately remove the chemical, rinse thoroughly and wipe dry. Abrasives such as scouring pads or gritty cleaners may permanently dull and/or scratch the surface and result in future staining.
- Do not polish or wax the surface.
- Protect the surface from hot or sharp objects. Do not place hot cookware, dishes, or objects onto the surface.
 Knives and other sharp objects used directly on the surface can also be damaging.

Acrylic Shields & Modesty Panels

- Clear and frosted acrylic shields and modesty panels can be easily cleaned by using mild soap, water, and a soft cloth.
- To disinfect the acrylic, you may use a diluted bleach solution and a clean, soft cloth. Prepare the solution using 1/3 cup bleach per gallon of water OR 4 tsp. bleach per quart of water.
- When applying the mild detergent + water or diluted bleach solution be sure to only using light pressure.
- Never use ammonia, acetone, alcohol, carbon tetrachloride, or gasoline as a cleaning solution. These
 types of solvents can cause cracks in the acrylic and give the surface a frosted appearance.
- Do not use paper towel to apply or remove the cleaning solutions listed above. It may scratch the acrylic.

